

[www.geargb.co.uk](http://www.geargb.co.uk)

- 1) Unscrew the dark grey blank plug from engine casing and replace with the sensor
- 2) Separate yellow wire from oil level switch in engine casing and plug in the yellow connector cable.
- 3) Connect the sensor to the yellow connector cable.

